SimPad with Session Viewer or SimView Mobile

Quick Setup Guide







EN

www.laerdal.com

Contents

Introduction	4
Start Session Viewer	5
Connect Patient Monitor to SimLink Network	7
Connect SimPad to Session Viewer	11
Start a Simulation	12
Review in Session Viewer	13
Additional Information	15



This Quick Setup Guide shows how to set up Patient Monitor and Session Viewer on a single computer. Setup will be similar if setting these up as separate devices, or when using SimView Mobile.

Ensure the SimPad and Link Box are turned on, connected to each other and on the same network. For more information on connecting SimPad to Link Box, refer to SimPad User Guide.

Using the SimLink network is recommended for this process.



Start Session Viewer



From Laerdal Simulation Home, start Session Viewer.

	Configure your
Open a debriefing file (.ssx)	
If you have a SimPad or SimView file,	you can open and view it here
Configure your system	
If you want to configure your system	
Add license	
This will enable video to be recorded	

Click 'Configure Your System'. Ensure that screen recording is activated, as well as video from the computer's camera.

Note When Session Viewer opens, check that both the screen recording and video are visible.

Start Session Viewer



🗒 Note

2

For more information on configuring Session Viewer, connecting web cams and activating screen recording, refer to Session Viewer User Guide.



Once Session Viewer is set up, connect the computer to the network that SimPad and Link Box are on. Return to Laerdal Simulation Home and open Patient Monitor.

Click 'List of Available Simulator Networks'. Select your network from the list.

	Sele	ect simulator network	
	SimLink Link Box		
	3GTest2GHz Other network Connected to this network	Name: SimLink Connected: False Has profile: True Channel: 1, Strength: 100%, Bssid: 02-27-A7-44-5D-3F	
imLink	Link Box		
		Show all available networks	
	l	Show all available networks	

Note Note

You must use this screen to switch between networks. When you want to connect to a nonsimulator network, click 'Show all available networks' and select the network from the list.

< Rack X					
Connecting to a SimLink network					
The Link Box currently has its own simulation network called "SimLink", which is an ad-hoc network without Internet connection. To access SimStore/Internet while connected to "SimLink", Laerdal recommends plugging an ethernet cable to an Ethernet wall socket.					
Connect to the ad-hoc network 'SimLink'					
Connect to the ad-hoc network 'SimLink'					

Note

Before connecting, Laerdal Simulation Home will change network settings on your computer. When the warning dialogue pops up, allow changes by clicking 'Yes.'

Using the network settings in Microsoft Windows might cause issues when switching back to a Simulator Network.

After configuration is complete, select the Link Box from the Patient Simulator list. Check that the serial number matches the one on your Link Box.

Adult	5/21/2015 07:45	3wave	
ECG Lead	s Off	^{HR} _ ? .	_
SpO ₂ No Se	ensor	sp0₂	
Touch when sensor CO ₂ No Se	[·] connected nsor	etCO ₂	
Touch when sensor	connected Pulse		Tblood
Touch when cuff at	ached -	Graph D	Nain Main

Once connected to the Link Box, the Patient Monitor will be displayed.

Patient Monitor is now connected to the SimLink network.

Connect Patient Monitor to SimLink Network

Go to System Settings on SimPad.

Ba	ick	03:5	9	57 %	0 %
2	🔥 Syst	em settir	ngs		
	Conr	nect to Link B	ox		
	🙃 WiFi				
	Languages and units				
	Disp	lay and Powe	r		
	Time	e and date			
C Debrief	ing server				
	Abo	ut SimPad			
	C Deb	riefing server			
-	l				

Then select 'Debriefing Server'

Select Session Viewer from the list.

Session Viewer will show that it is selected. Then go back to menu.

Connect SimPad to Session Viewer

	03:59	57 % 🕂 🚺 🛛	1 %			
What of Manual Mode	do you want	to do ²	lanual Mode		To start a tap Manua Automatic	simulation, Il Mode or : Mode.
			ancet	Se 05:14	lect any th	ieme.
SimStore		iystem settin	Selecting a new Your log will be	t heme heme: ACS (Che theme will start saved.	st Pain) : a r ew session.	-
		٦	Circulatio	on age		
Back	00.00		Respirati	on		
	00.00		SimNew	3		
Session info 1. Jan 2000	ormation		Healthy			
Name session: Instructor: Participant 1: Participant 2: Participant 3:	Post Partum Hemorrha	age 5	F			-
	Add participant					
Debriefing s No debriefing s	erver	0				
	ок					

If no Debriefing Server is connected, or you wish to connect to another server, tap 'Debriefing Server' and select the correct server from the list.

Start a Simulation

The name of the selected server will appear. Tap 'back'.

Your chosen Session Viewer will appear as the Debriefing Server. Tap 'OK'.

SimPad is now connected to Session Viewer

Tap "Start" to start your simulation session.

The SimView icon will turn green to show it is recording.

When you are finished with a simulation you can review in Session Viewer. Once the simulation stops, session viewer will appear, press stop which opens up automatically on your screen.

This is an example of a debriefing screen in Session Viewer, showing video feed from the camera and screen recording from your computer.

6

To switch to Session Viewer, hold down alt+tab on your keyboard (Windows PC). Alternatively, close Patient Monitor from the Main Setup Menu.

Click 'Shutdown Monitor' to close Patient Monitor

Additional Information

Using other networks

To disconnect from the simulation network or switch to a regular network, select Main Setup Menu from the Patient Monitor screen.

Click 'List of Available Simulator Networks'. Select your network from the list.

Select 'Connection Settings' from the Menu options.

Use this screen to switch between networks.To connect to a non-simulator network, click 'Show All Available Networks' and select the network from the list.

Patient Monitor is now disconnected from the SimLink network and now connected to your chosen network.

Connection Settings

© 2015 Laerdal Medical AS. All rights reserved.

www.laerdal.com